


SELF-SWAB INSTRUCTIONS

FOR SD BIOSENSOR ANTIGEN RAPID TEST



DO NOT PROCEED IF:

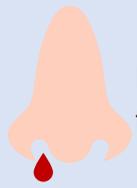

Nosebleed in the past **24 hours**



Nasal surgery in the last **4 weeks**



Facial injury in the last **8 weeks**

SWABBING PROCEDURE

1 Please clean your hands before starting the test.



2 Before starting the test, please take out one swab stick, one test device, one sealed extraction buffer tube and one nozzle cap.



3 Remove swab stick from package.




4 Insert the swab stick into the nostril (~2cm) while gently rotating. Twirl the stick 10 times while in the nostril.




5 Repeat for the other nostril with the same swab.



6 Remove the seal from the extraction buffer tube and insert the swab into the extraction buffer tube to mix. While squeezing the buffer tube, stir the swab for 10 times.



7 Squeeze the reagent tube when extracting the swab.




8 Press the nozzle cap tightly onto the tube.



9 Use your finger to gently tap the side of the tube a few times. This helps to mix the solution.



10 Place 4 drops onto the sample well of the test cartridge.

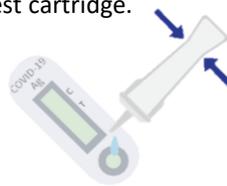

11 Wait for 15mins before checking the results on the test cartridge. Please keep the cartridge on a flat surface during this time.



12 Read the results on the test cartridge. **If you see a line appearing at both the "C" and the "T" position, this indicates a positive test. Please seek medical attention for further evaluation and confirmatory testing.**

If you see a line appearing at only the "C" position, this indicates a negative test.

If you see a line appearing at only the "T" position, the test is invalid. Please repeat the test on another test kit.

13 Dispose all used swab sticks, reagent tube and test cartridge into the biohazard bag.




14 Clean your hands after the test.




POSITIVE



NEGATIVE



INVALID

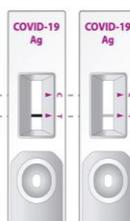

"C" Control Line
"T" Test Line